

BORK

BLENDER B 780

INSTRUCTION MANUAL





6 BLADES SYSTEM

Custom designed knife with 6 blades ensures perfect chopping. In just a few seconds you get a homogenous blend.


UNIQUE JAR

A heat-resistant borosilicate glass stylish jar. Easy connection of the jar and the base of the blender thanks to the patented system. A trefoil shape of the jar ensures cyclone effect when operated.



COMPACT DESIGN

Thanks to the clever design this blender is a combination of a compact design and high performance, and all-metal casing minimizes noise level and vibration. The blender base is also equipped with a handy cable compartment.

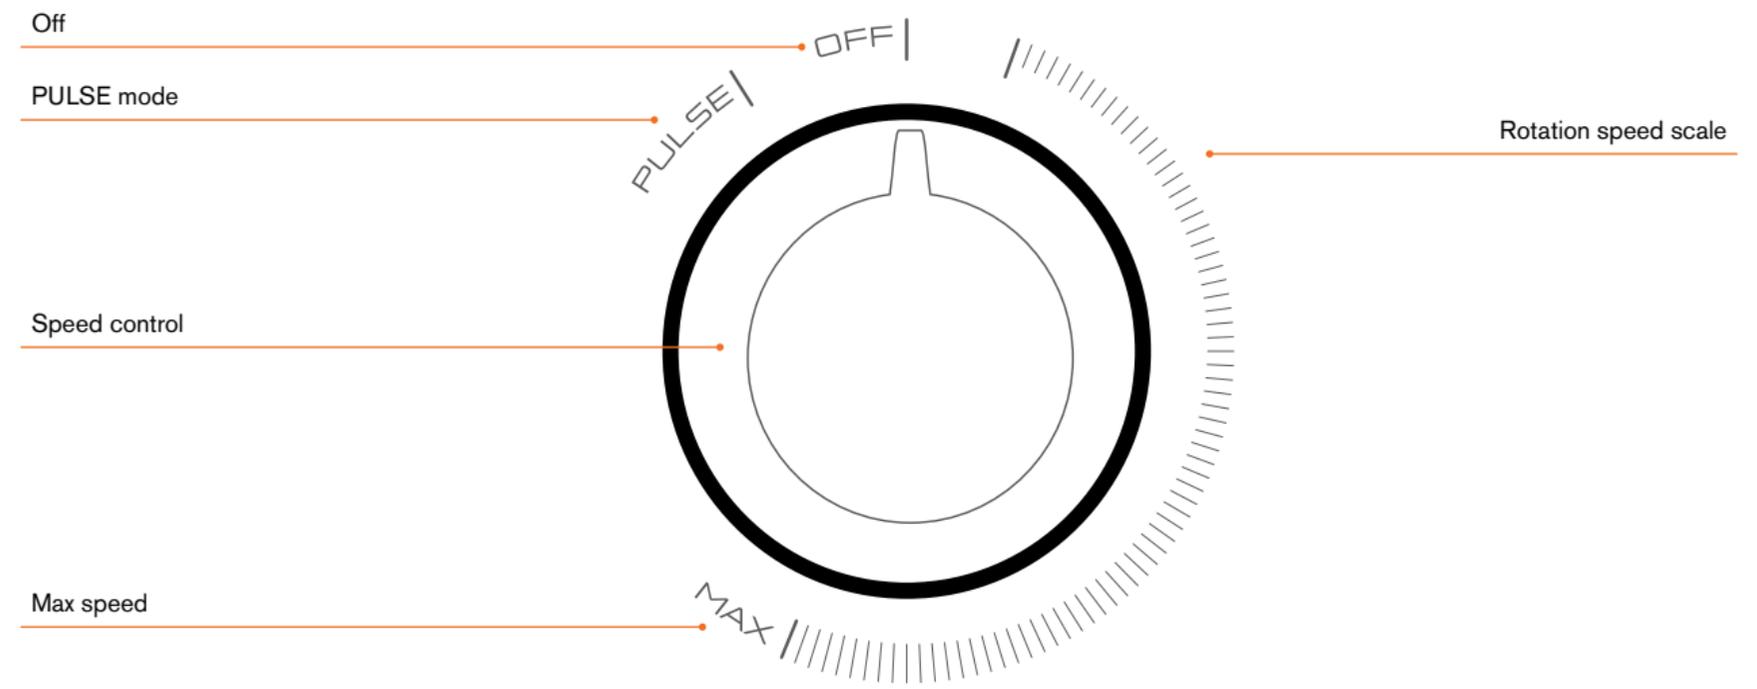

BEFORE THE FIRST USE

- Before the first use remove and safely dispose the packaging materials.
- Thoroughly wash all removable parts with flow water and dry.

CRITICAL SAFETY PRECAUTIONS

- Do not touch the power cord plug with wet hands.
- Plug the device only into a grounded socket outlet.
- Do not pull the cord when unplugging the device; always take the power plug.

INSTALLATION OF THE BLADES SET

- Install the blades set into the jar from the bottom to align the marks.

The blender's blades are very sharp and require extremely careful handling.

- Press the blades set against the jar and turn the bottom ring clockwise until locking.
- To disassemble the blades set proceed in the reverse order.



The jar installation

- Install the jar with the blades set on the base.

The blender is equipped with a safety device which is activated on contact of the jar with the base, so install the jar in such a way that quiet clicks of the microsensors appear (at that the safety device is unlocked).

The jar can be installed in four positions (with 90° rotation respectively).

ON/OFF

- Place the ingredients in order that the level does not exceed the MAX mark.
- Close the lid tight.
- Make sure that the speed control is in OFF position.
- Plug the blender in.
- The ingredients of smaller size can be fed during the blender operation at that remove the measuring cup from the feeding opening by slightly turning it over.

The root crops (carrots, celery root etc.) are to be fed through the feeding opening in the lid only when the blender is operated to avoid the blades blockage.

Never turn the empty blender ON.

- Set the required speed or PULSE mode.

Start blending at low speed then the speed can be gradually increased.

- After use turn the speed control OFF and unplug the blender.

Switch the appliance off before taking the lid off. Press the lid against the jar during operation to avoid accidental opening due to overpressure.

Clean the blender immediately after use.

- For easy cleaning fill the jar with water and mild detergent and turn the blender on for a few seconds. Repeat with clean water.
- Switch the appliance off and unplug.
- Take the blender's jar off the base.
- To take the blades set off turn the bottom ring counterclockwise and carefully remove the blades set.
- First take the blades set off, then the lid.

The blender's blades are very sharp and require extremely careful handling.

- Thoroughly wash the blades, the jar and the lid with flow water and some detergent. Dry them.

Do not use steel wool, chemicals, abrasive cleansers and agents containing sulfanilamide or citric acid for blender cleaning.

Do not wash the blades set in dishwashers.

The jar, the lid and the measurement cup are suitable for washing in dishwashers.

- Wipe the exterior of the blender's casing with a wet napkin soaked with soapy solution and then with a soft dry napkin.

Prevent the base from contact with water or other liquids.

- Install the blades set into the jar base but put the silicone ring on first.
- Turn the blades set clockwise until locking to securely fix the blades set in the jar.

SAFETY SYSTEM

In order to prevent the motor's wear the blender automatically stops after 1–2 minutes of continuous operation. In case of an emergency switch actuation unplug the blender and let it cool down for 30 minutes.

STORAGE

Store the appliance assembled in the vertical position in a dry cool place away from acids and alkalis storage areas at temperature from 5 to 30°C and relative humidity 65% max.

| Failure | Solution |
|--|--|
| The motor is not switched on, the blades do not rotate | Make sure that the blender's jar is properly installed Make sure that the appliance is plugged in |
| The product is blended unevenly | Cut the ingredients in equal pieces of 2–3 cm |
| The blender is overloaded | Remove some blend, cut the ingredient in smaller pieces or process a smaller amount of ingredient at a time. In case of an emergency switch actuation unplug the blender and let it cool down for 30 minutes, until the motor gets entirely cold. |

- Carefully read this operational manual as it contains important safety, use and maintenance information. Keep this manual in a safe place. BORK company is not liable for any damages resulting from infringement of the safety rules.
- Before the blender use make sure that the mains supply specifications comply with the ones specified on the appliance rating plate.
- The blender is intended only for home use.
- This appliance is not intended for use by individuals (children included) with sensory system or mental disabilities as well as unexperienced and unskilled individuals.
- Always plug the appliance into a grounded socket outlet (in default of the grounding connection in accordance with the local rules the manufacturer (a party authorized by the manufacturer) disclaims any indemnity liability.
- Before use make sure that the blender is properly and entirely assembled.
- Before use wash all removable parts.

- The blender is intended for blending liquids and food. Use the blender for intended purposes.
- Place the appliance only on a dry even horizontal surface. Do not place the blender on gas or electric oven or in close proximity of heat sources.
- Do not move the blender when operated. Do not remove the lid and the jar from the base during operation.
- Do not overload the blender's jar – do not fill it above the maximum level mark. Excessive amount of product can result in the motor stop.
- Do not blend hot food and liquids in the blender. Let them cool down up to the temperature below burn hazards (below 50 °C), before placing them into the jar.
- Make sure that the lid is securely fixed before switching the blender on. Do not use the blender without lid. If you need to add the ingredients in the jar during operation, remove the internal lid and feed the product through the opening in the lid.

- When blending vegetables or fruits (boiled or crude) cut them first into equal pieces of 2–3 cm — this will facilitate the blending.
- Do not exceed 1.2 l of the lightweight liquids (stock, milkshake) and 0.8l of creamy liquids (cream soup, sauce, batter).
- When blending the ingredients of different texture first blend the liquids, than add the dry ingredients unless otherwise stated in the recipe.
- To avoid the blades damage, remove the kernels from fruits and the bones from meat before blending.
- Wash the blender immediately after use.
- The blender is not intended for dense dough or mashed potato.
- To avoid excess blending check the consistency.
- If necessary remove the lid from the unplugged blender from time to time and clean the mixture from the side walls of the jar. Make sure that the blades fully stopped before taking the lid off.
- When operating the blender on maximum speed hold the lid.

- Do not leave the operating blender unattended.
- Always unplug the appliance after use, as well as before assembly, dismantling, cleaning, handling or storage.
- The blender's blades are very sharp and require extremely careful handling. Do not place your hands into the blender's jar when it is plugged in.
- Switch the blender on only when the lid is tightly closed. Make sure that the blades fully stopped before taking the lid off.
- Avoid hanging off the power cord down the edge of the table, do not lay in on heating surfaces avoid cord jam.
- Do not place any parts of the blender in a microwave oven.
- Do not use the jar for food storage.
- When blending hard ingredients the jar can become mat with time.
- Do not switch the blender on without any food product or liquids.
- The jar, the blades set and the lid are subject to normal wear, the useful life depends on careful handling.

- Never immerse the blender's base with the motor, the power cord or the power plug in water or any other liquid. Avoid condensate formation thereon; do not use the appliance in areas with high humidity.
- Avoid foreign objects of liquids penetration in the appliance base that it can result in damage.
- Check the power cord, the power plug and the blender for damages on a timely basis. Upon detection of any damage immediately stop to use
- the blender and bring it into the nearest service center for testing, replacement or repair.
- Do not remove or damage the nameplate containing information of the appliance and its serial number. It is required for the appliance identification in case of any failure.
- Do not use steel wool, abrasive sponges, chemicals, abrasive cleansers, as well as any agents and tools that are able to damage or scratch the blender.
- Do not use or store the appliance at temperature below 0°C or high humidity.
- The appliance shall be transported only in original package fixed upright.
- Dispose the appliance in accordance with the rules and regulations in force in the country of distribution.

REMEDIAL MEASURES

- Upon detection of any damage immediately stop to use the blender and bring it into the nearest BORK service center for testing, replacement or repair.
- For safety reasons all operations on repair and maintenance of the appliance shall be performed only by representatives of authorized BORK service centers. For addresses and telephones of the service centers visit the web-site www.bork.ru or call 8 800 500 88 99.

SPECIFICATIONS

Voltage: 220–240 V

Frequency: 50 Hz

Power: 450 W

The jar volume: 1,2 l

RPM: up to 25 000 rpm

Overall dimensions (HxWxD): 330×155×170 mm

Weight: 4,7 kg

Cord length: 1 m

Made in Switzerland

Appliance designation info: the appliance is intended for blending and beating up the food products. Specific distribution terms are not specified.

SPECIFICATIONS

Blender base: 1 pc.

Jar: 1 pc.

Blades set: 1 pc.

Lid: 1 pc.

Operating manual with warranty card: 1 pc.

Attention! Due to continuous product improvement the manufacturer retains the right to alter design, configuration and specifications. For the recent version of the present manual visit the web-site www.bork.ru.

Dear customers, if you have any questions related to the purchase, operation and maintenance of BORK equipment, you can use the phone number

8 800 500 88 99
(Information support service).

PLATINUM COLLECTION





Video reviews of home appliances premium class, expert advice, recipes and star guests – all this you will find on the official BORK channel on Youtube.



Premium home appliances collection, BORK product customer reviews, useful tips and news from official brand boutiques.



Tips for choosing home appliances, recipes from the brand-chef, design solutions and other ideas for a wonderful and comfortable life from BORK experts.

WARRANTY CARD

The BORK company carries warranty for 1 years from the date of sale of this product.

To avoid misunderstandings, we kindly ask you to carefully study the Operating Instructions, the conditions of warranty, check the correctness of the warranty card. Warranty is valid if correctly and legibly indicated: model, serial number of the product, the date of sale, clear stamps of the firm-seller, the buyer's signature. The model and serial number of the product must correspond to those in the warranty card.

If any of these conditions or when the data specified in the warranty card, altered, deleted or overwritten, the warranty card shall be deemed invalid. If the date of the sale cannot be established, in accordance with the legislation on consumer protection, the warranty period and service life are counted from the date of manufacture.

| | | | |
|---|---------|---|------------------|
| Product | BLENDER | The date of manufacture is encoded in the serial number, for example: | |
| Model | B780 | 1 and 2 signs — the week of manufacture; 3 and 4 signs — the year of manufacture; the last 5 signs — serial number. | |
| Serial number | | The product tested, staffed, mechanical damage is absent. | |
| Date of purchase | | I agree to the terms of the warranty and service. | |
| Information about the Seller (name, legal address) | | Customer Signature | Seller Signature |
| | | | |

STAMP HERE

Name and address of the manufacturer (the person authorized by the manufacturer), the importer, contact information are shown on the product packaging.

TERMS OF SERVICE

The manufacturer reserves the right to refuse satisfying consumer demands for warranties in case of non-compliance with operating conditions, installation procedure, intentional or careless actions of the buyer (customer) or third parties, which caused damage to the product.

Warranty does not cover:

- elements and details, with natural wear. Natural wear means the consequences of product use which caused the deterioration of its technical condition and appearance due to the prolonged use of the product.

The warranty does not cover products with damage caused by:

- misuse, neglect, improper storage, improper connection, failure to observe the supplied operating instructions;
- foreign objects, substances, liquids, insects or animals inside the body of the appliance;
- impact of high and low ambient temperatures on heat sensitive parts of the product;
- mechanical impact;
- Improper repairs and other interventions resulting in changes to the product design;

- connecting to the network with a voltage other than specified in the instructions for use of the product, or a non-compliance of the electric supply to state standards of the Russian Federation;
- using the product for industrial and/or commercial purposes;
- damaged electrical cords;
- using cleaning products, not specified in the operation manual;
- the use of non-standard (non-original) consumables, accessories, spare parts;
- force majeure circumstances (fire, flood, lightning).
- Replacing faulty parts in the product (parts, components, assembly units) during the warranty period does not lead to the establishment of a new guarantee period either for the entire product or the part replaced.

SERVICE CENTRE ADDRESSES

JSC «Сервис», Moscow, 10 Bolshaya Sadovaya St.

Current information about service centers in your area can be found at www.bork.ru or by calling 8 800 500 88 99.

