

BORK

HAND BLENDER B 781

INSTRUCTION MANUAL





COMFORT

This blender has a well-balanced gravity center, a stretch cord, and an ergonomic anti-slip handle.

A clever casing design minimizes vibration and noise.

The appliance is operated by a single push-button. All this ensures operational convenience.

DURABILITY

All-metal casing ensures a long service life and contributes to the blender's distinctive appearance.




VERSATILITY

Thanks to a set of attachments including a whisk, a chopping knife and an anti-spill attachment you can beat light and airy mixtures, mash, chop fruit and vegetables, whisk eggs and much more.

THE QUALITY OF SWITZERLAND

Innovative motor, developed by the top engineers and manufactured in Switzerland helps to minimize vibration therefore the beating process is almost silent.

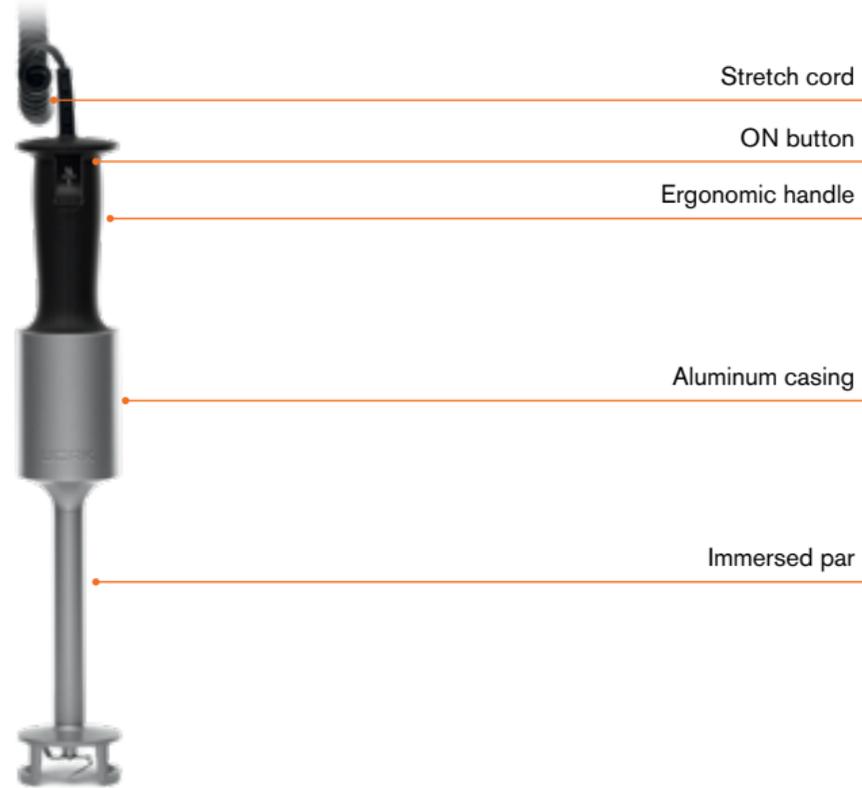

Anti-spill attachment



Chopping knife



Whisk attachment

BEFORE THE FIRST USE

- Before the first use remove and safely dispose the packaging materials.
- Wash the metal part of the hand blender and the attachments with neutral detergent in warm soapy water.
- Avoid water on the handle and inside the casing.

ELECTRICAL SAFETY PRECAUTIONS

- Do not touch the power cord plug with wet hands.
- Do not pull the cord when unplugging the device; always take the power plug.



To remove and change an attachment, always unplug the blender first.

- Choose and place the required attachment at that the locking device on the blender's base shall engage the groove.
- Press the required attachment until tight.
- Thanks to the special shape of the slot the attachment is not released during operation.
- Just pull on to remove.



ANTI-SPILL ATTACHMENT

- To blend small portions before fixing the blades insert the attachment into the slot in the base of the immersed part.
- To remove the attachment, press the sides in the metal frames of the slots on the base of the immersed part.

Be careful as the blades are extremely sharp.

ON/OFF

Plug the blender in.

Immerse the blender into the product to be processed before switching it on.

- For the low speed slide the ON button halfway. For the high speed slide the ON button until stop.
- To stop the operation release the ON button.

Switch the blender off before taking it out of the product.

- Unplug the appliance after use and let it cool down before taking it away for storage.

MAINTENANCE

Avoid moisture on the handle.

The appliance must not be used on rough surfaces, for example in cast-iron cookware. This can result in the blender paint coating damage.

The immersed part can get discolored upon contact with coloring product.

The recommended time of continuous operation is about 1 minute.

The maximum blender operation time should not exceed 5 minutes.

Make at least 2 minutes break for cooling down before restart.

CLEANING

- Unplug the blender before cleaning.
- The blender's blades are very sharp and require extremely careful handling.
- Remove the attachment and wash it by hand.
- If the immersed part also needs to be cleaned wash it with a small amount of water, avoid moisture on the handle and inside the casing.

Do not use steel wool, chemicals, abrasive cleansers and agents containing sulfanilamide or citric acid for blender cleaning.

- For easy cleaning of the immersed part after processing nonfat product just immerse it into warm water and switch the appliance on for 10 seconds.

STORAGE

Store the appliance in a dry cool place away from acids and alkalis storage areas at temperature from 5 to 30°C and relative humidity 65% max.

Keep the appliance away from direct sunlight and avoid significant temperature differences.

- Carefully read this operational manual as it contains important safety, use and maintenance information. Keep this manual in a safe place. BORK company is not liable for any damages resulting from infringement of the safety rules.
- Before the blender use make sure that the mains supply specifications comply with the ones specified on the appliance rating plate.
- The blender is intended only for home use.
- This appliance is not intended for use by individuals (children included) with sensory system or mental disabilities as well as unexperienced and unskilled individuals.
- Before use make sure that the blender is properly and entirely assembled.
- Before use wash all removable parts.
- Be careful when handling the chopping blades, they are extremely sharp.
- Do not touch the moving part of the blender to avoid injury and the appliance damage.

- Do not blend very hot food.
- Always unplug the appliance before assembly, dismantling and cleaning as well as after use.
- Do not use the hand blender for grinding the coffee beans of any other hard product for example nutmeg. Processing hard product can result in the blades damage.
- The blade, the whisking and the anti-spill attachments are subject to normal wear, the useful life depends on careful handling and frequency of use.
- Never immerse the blender's base with the motor, the power cord or the power plug in water or any other liquid. Avoid condensate formation thereon; do not use the appliance in areas with high humidity.
- Avoid foreign objects of liquids penetration in the appliance casing that it can result in damage.
- Do not remove or damage the nameplate containing information of the appliance and its serial number. It is required for the appliance identification in case of any failure.

- Do not use steel wool, abrasive sponges, chemicals, abrasive cleansers, as well as any agents and tools that are able to damage or scratch the blender.
- Do not use or store the appliance at temperature below 0C° or high humidity.
- The appliance shall be transported only in original package securely fixed.
- Dispose the appliance in accordance with the rules and regulations in force in the country of distribution.

REMEDIAL MEASURES

- Upon detection of any damage immediately stop to use the blender and bring it into the nearest BORK service center for testing, replacement or repair.
- For safety reasons all operations on repair and maintenance of the appliance shall be performed only by representatives of authorized BORK service centers. For addresses and telephones of the service centers please visit the web-site www.bork.ru or call 8 800 500 88 99.

SPECIFICATIONS

Voltage: 220–240 V
 Frequency: 50 Hz
 Power: 300 W
 RPM: up to 20 000 rpm
 Overall dimensions (L×H): 60×370 mm
 Weight: 0,94 kg
 Made in Switzerland

Appliance designation info: the appliance is intended for blending and beating up the food products. Specific distribution terms are not specified.

CONFIGURATION

Hand blender: 1 pc.
 chopping blade: 1 pc. whisking attachment: 1 ps.
 anti-spill attachment: 1 pc.
 Operating manual with warranty card: 1 pc.

Attention! Due to continuous product improvement the manufacturer retains the right to alter design, configuration and specifications.

For the recent version of the present manual visit the web-site www.bork.ru.

Dear customers, if you have any questions related to the purchase, operation and maintenance of BORK equipment, you can use the phone number

8 800 500 88 99
 (Information support service).

PLATINUM COLLECTION





Video reviews of home appliances premium class, expert advice, recipes and star guests – all this you will find on the official BORK channel on Youtube.



Premium home appliances collection, BORK product customer reviews, useful tips and news from official brand boutiques.



Tips for choosing home appliances, recipes from the brand-chef, design solutions and other ideas for a wonderful and comfortable life from BORK experts.

WARRANTY CARD

The BORK company carries warranty for 1 years from the date of sale of this product.

To avoid misunderstandings, we kindly ask you to carefully study the Operating Instructions, the conditions of warranty, check the correctness of the warranty card. Warranty is valid if correctly and legibly indicated: model, serial number of the product, the date of sale, clear stamps of the firm-seller, the buyer's signature. The model and serial number of the product must correspond to those in the warranty card.

If any of these conditions or when the data specified in the warranty card, altered, deleted or overwritten, the warranty card shall be deemed invalid. If the date of the sale cannot be established, in accordance with the legislation on consumer protection, the warranty period and service life are counted from the date of manufacture.

Product	HAND BLENDER	The date of manufacture is encoded in the serial number, for example:	
Model	B781	1 and 2 signs — the week of manufacture; 3 and 4 signs — the year of manufacture; the last 5 signs — serial number.	
Serial number	The product tested, staffed, mechanical damage is absent.	
Date of purchase	I agree to the terms of the warranty and service.	
Information about the Seller (name, legal address)	Customer Signature	Seller Signature

STAMP HERE

Name and address of the manufacturer (the person authorized by the manufacturer), the importer, contact information are shown on the product packaging.

TERMS OF SERVICE

The manufacturer reserves the right to refuse satisfying consumer demands for warranties in case of non-compliance with operating conditions, installation procedure, intentional or careless actions of the buyer (customer) or third parties, which caused damage to the product.

Warranty does not cover:

- elements and details, with natural wear. Natural wear means the consequences of product use which caused the deterioration of its technical condition and appearance due to the prolonged use of the product.

The warranty does not cover products with damage caused by:

- misuse, neglect, improper storage, improper connection, failure to observe the supplied operating instructions;
- foreign objects, substances, liquids, insects or animals inside the body of the appliance;
- impact of high and low ambient temperatures on heat sensitive parts of the product;
- mechanical impact;
- Improper repairs and other interventions resulting in changes to the product design;

- connecting to the network with a voltage other than specified in the instructions for use of the product, or a non-compliance of the electric supply to state standards of the Russian Federation;
- using the product for industrial and/or commercial purposes;
- damaged electrical cords;
- using cleaning products, not specified in the operation manual;
- the use of non-standard (non-original) consumables, accessories, spare parts;
- force majeure circumstances (fire, flood, lightning).
- Replacing faulty parts in the product (parts, components, assembly units) during the warranty period does not lead to the establishment of a new guarantee period either for the entire product or the part replaced.

SERVICE CENTRE ADDRESSES

JSC «Сервис», Moscow, 10 Bolshaya Sadovaya St.

Current information about service centers in your area can be found at www.bork.ru or by calling 8 800 500 88 99.

