


BORK



KETTLE K780
USER MANUAL



My BORK

Register your BORK equipment in your account  on the bork.ru website. You will get quick access to instructions, accessories, spare parts and reminders for consumables replacement.



TEMPERATURE SETTINGS

BORK K780 has five preset temperature settings for different tea variety. Such function allows you to brew a perfect drink that reveal the true tealeaf flavor.



ADDITIONAL FEATURES

Boil First function to boil the water first and then get the required temperature depending on the tea variety.

The Keep Warm function enables to maintain the selected temperature up to 10 minutes. You can reset all the settings any time by simply taking the kettle off the base.

Lid with integrated filter

 
Glass vessel SCHOTT DURAN 1.7 l

Power base



Handle


Display and control panel

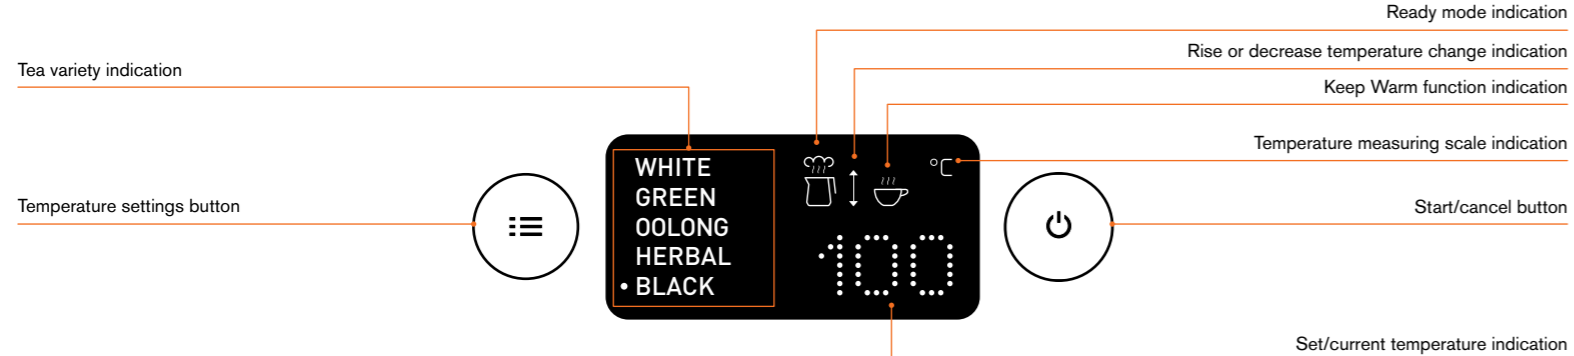

POWER OUTLET CONNECTION RULES

 
- Do not touch the power cord plug with wet hands
- Connect the device to grounded sockets only.
- When removing the plug from the power outlet, do not pull the cord; always take by the plug.

FIRST TIME USE


- Fill the kettle with water till MAX level, then boil it by pressing button , pour the water away.

OPERATING

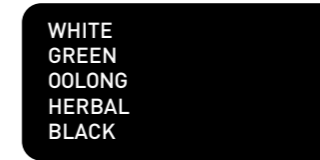

- Connect the kettle to the power outlet. The control panel will switch to ready, and the following indications will be displayed:





- Fill the kettle with water between level marks MIN (500 mℓ) and MAX (1,700 mℓ).
- Put the kettle onto the base.

- Using button  select the desired temperature settings:

White	65°C
Green	75°C
Oolong	85°C
Herbal	95°C
Black	100°C

 - Push button  to start heating, indication will be displayed  ↑ together with current water temperature.

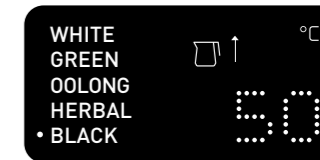

- When the selected temperature is reached, it will be announced by a sound signal and indication  on the display.






KEEP WARM



The Keep Warm function allows to maintain the selected temperature inside the vessel for longer time.

Activate the Keep Warm function before setting water temperature inside the kettle is reached.

Maximum operation time of the Keep Warm function — 10 minutes.

- To activate the Keep Warm function, press and hold buttons  and  for 2 seconds. Indication  will be displayed.




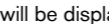
- To cancel the Keep Warm function, press and hold buttons  and  for 2 seconds or take the kettle off the base.

STAND BY MODE


If kettle is not used and Keep Warm function is inactive, the appliance will automatically switch to stand by mode after 3 minutes. The display is off in this mode.

 
- To bring the kettle back to the operating mode, take it off the base and then put it back, or push any button on control panel.

 
PRELIMINARY BOILING FUNCTION – BOIL FIRST


- This function allows to prepare water for optimal tea brewing.
- Having selected the temperature settings, press and hold button  for 3 seconds.
- Indication 100 will be displayed temporarily to indicate that Boil First function is active.
- Then  will be displayed, as well as the current water temperature inside the kettle.



- As soon as the water boils, indication  will be displayed and the water temperature inside the kettle will start dropping to the selected value.

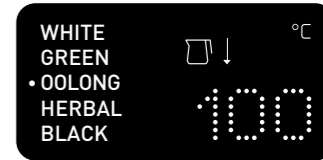

 - When the selected temperature is reached, it will be announced by a sound signal and indication  will be displayed.

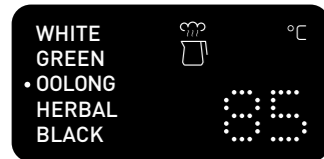

CLEANING AND CARE

- Disconnect the kettle from the power outlet and let it cool down before cleaning.
- Do not use abrasive detergents or scrubs for cleaning.
- Wash the kettle lid with running water and a liquid detergent, then wipe it with a soft dry cloth.
- Rinse the glass flask interior with clean running water.
- Wipe the glass flask exterior with a cloth wetted with a soap solution. Then wipe it with a dry cloth.
- Do not use for cleaning of metal surfaces any abrasive items, lemon acid, hard sponge or wire wool.
- Remove scale on a regular basis using a special lime scale remover.

To avoid damage, do not wash the device or its components in a dishwasher. Do not use for cleaning of metal surfaces of the product any abrasive particles, lemon acid, hard sponge or wire wool as this will damage the kettle. The device power base and vessel bottom are not designed for immersion in water during cleaning.

STORAGE

It is recommended to store the device in the assembled condition in a cool dry place isolated from places for storing acids and alkalies at 5 to 30 °C temperature and maximum relative humidity of 65%. Do not expose the device to significant temperature changes or direct sunlight.

TROUBLESHOOTING

Failure/Issue	Solution
E1/Overheat	Let the device body cool down. Then fill the kettle with water.
E2/Device malfunction	You need bring to a BORK authorized service center.

SAFETY MEASURES

- Make sure the mains voltage correspond to the device parameters prior of using it.
- Connect the device to grounded sockets only (if grounding is not implemented in conformance to the local regulations, the manufacturer/ manufacturer's authorized representative disclaims any indemnity liability).
- Proceed with caution using a kettle filled with hot water.
- To avoid burns, do not touch the kettle body, only use the handle. Be careful with the hot steam coming out of the lid.
- Do not open the kettle lid during water heating or just after switching off.
- Use the kettle for water heating only.
- Do not put the kettle in close vicinity to heat sources or onto uneven surfaces.
- Do not put the kettle close to items that may be deformed by heating.
- Do not fill the kettle with water above the maximum level to avoid spillage on the connector.
- If the kettle is overfilled, boiling water may be ejected.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.

- The heating element surface is subject to residual heat after use.
- It is necessary to remove scaling from the kettle on a regular basis, see the Cleaning and care section. Scaling can change the internal surface color, cause an excessive noise during operation, kettle switching-off issues upon reaching the selected temperature, and increase the water heating time.
- The kettle is only to be used with the stand provided.
- Warning: Avoid spillage on the connector.
- Warning: Potential injury from misuse.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- The device is not a measuring instrument. Indication errors may take place due to external influence.
- Do not remove the nameplate specifying the device serial number and data and do not let it get damaged. It is required for precise device identification in case of a malfunction.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.

- Keep the appliance and its cord out of reach of children aged less than 8 years.
- The device may be transported in the original package only and in a fixed vertical position.
- This appliance is intended to be used in household and similar applications.
- Dispose of the device in conformance to and meeting the local legislative requirements of the country of use.

REMEDIAL MEASURES

- If a device fault is detected, you should immediately stop using it and hand it over to the nearest BORK authorized service center for testing, replacement or repair.
- For reasons of safety, all repair and maintenance works shall be carried out only by representatives of authorized BORK service centers. Addresses, instruction manual and phone numbers of service centers are available at www.bork.com.

TECHNICAL SPECIFICATION

Voltage: 220–240 V
 Frequency: 50/60 Hz
 Power: 2.000–2.400 W
 Dimensions (H × W × D): 255 × 235 × 200 mm
 Volume: 1.7 ℓ
 Weight: 1.6 kg
 Made in China.

Product designation information:
 the device is designed for boiling water.
 Special sales terms are not specified.

CONFIGURATION

Kettle: 1 pc.
 User manual with a warranty certificate: 1 pc.

Warning! Due to the continuous improvement of its products, the manufacturer reserves the right to modify the design, configuration and technical parameters. See the latest update of this manual at www.bork.ru.

PLATINUM COLLECTION



INFORMATION ABOUT CERTIFICATION

The product is certified.



WARRANTY CARD

The BORK company provides a one-year warranty from the date of purchase of this product The service life determined by BORK representatives for this product amounts to 3 years from the date of sale, provided that the product is used in accordance with rules and recommendations set out in the operating manual attached to it and applicable technical standards.

In order to avoid misunderstandings, we ask you kindly to carefully study the user manual, terms of the warranty, check correctness of the warranty card. The warranty card is valid if a user has a correct and legible specification of the following information: model, serial number of the product, date of sale, clearly visible seals of the seller, buyer's signature. The model and serial number on the product shall comply with those indicated in the warranty card.

The warranty shall be deemed null and void if any of these conditions are violated and when data, specified in the warranty card, is altered, deleted or overwritten. If the date of sale can not be established in accordance the warranty period and lifetime shall be calculated from the date of product manufacture in accordance with the Consumer Protection Act.

Product KETTLE
Model K780
Sserial number
Date of purchase
Information on the seller company (name, legal address)

The date of manufacture is encoded in the serial number, for example 1st and 2nd characters – week of manufacture; 3rd and 4th characters – year of manufacture; last 5 characters – serial number.

The product is tested, completed and has no mechanical damage. The customer agrees with terms of the warranty and service agreement.

Customer signature Seller signature
Stamp here

Name and address of the manufacturer (person authorized by the manufacturer), importer and information intended to contact with them is indicated on packaging of the product.

TERMS OF SERVICE

The manufacturer reserves the right to refuse satisfaction of customer demands for warranties in case of non-compliance with operating conditions, terms of installation of the product, intentional or careless actions of the purchaser (customer) or a third party, which caused damage to the product.

The warranty does not cover:

- elements, characterized by natural wear and tear. Thus, normal wear and tear includes consequences of product application which caused deterioration of the technical condition and appearance due to prolonged use of this product.

The warranty does not cover products with the damage caused by:

- improper operation, careless handling, improper storage, improper connection, failure to observe supplied operating instructions;
- contact with foreign objects, substances, liquids, insects or animals, which takes place inside the unit s housing;
- impact of high and low ambient temperatures on heat sensitive parts of the product;
- mechanical effects;
- improper repair and any other intervention, which resulted in changes in the product design;
- application of the product with industrial and/or commercial purposes;
- damage of the power cord;

- application of detergents, not provided in the manual;
- application of non-standard (non-original) consumables, accessories, spare parts;
- connection to mains with a voltage value other than that specified in instructions for use of the product or non-correspondence with state standards of the Russian Federation;
- force majeure circumstances (fire, flood, lightning).

Replacement of faulty parts of the product (parts, components, assembly units) during the warranty period shall not lead to establishment of a new warranty period for the entire product, or a part replaced.

Service centre address

LLC «Premium Service», Moscow, Bolshaya Sadovaya 10.

Current information on availability of service centres in your area can be found on the site www.bork.ru or using the phone number 8 800 500 88 99.

