

BORK

TOASTER T 781

INSTRUCTION MANUAL

INSTRUCTION MANUAL

TOASTER T 781





4 AUTOMATIC SETTINGS

Classic toasts, toasted on both sides, crumpet for toasting on one side, special defrosting mode for toasting of frozen bread, as well as the bread heating mode – all convenience for a tasty snack.

AMAZING FUNCTIONS FOR CONVENIENCE AND COMFORT

The current mode, toasting time and remaining cooking time are indicated on the LCD display. User-friendly control, English menu. The special motorized system ensures smooth movement of the toasts, all you need for the best toast experience.



INTELLIGENT SYSTEM FOR COOKING TIME CONTROL

When toasting several portion in a row, the appliance will automatically reduce toasting time in order to prevent bread from burning.

STYLISH ALUMINUM BODY

The toaster aluminum body has a high strength, reliability and durability.

SLOW LIFT FUNCTION

This feature automatically raises and lowers the toast so you can check the toasting progress without interrupting and/or cancelling the toasting cycle.



FIRST TIME USE

- Remove the package, all advertising stickers and labels from the toaster body.



POWER OUTLET CONNECTION RULES

- Do not touch the power cord plug with wet hands.
- Connect the device to grounded sockets only.
- When removing the plug from the power outlet, do not pull the cord; always take by the plug.

OPERATING

- Connect the device to the power outlet.
- Put slices of bread into the toaster.

Slices of bread must fit loosely into the toaster slots.

- Use button  to select the necessary mode.
- Then side press switch  to select the required browning setting.

The browning setting range varies from 1 to 7.

- Press button OK.

SLOW LIFT FUNCTION

This function allows you to check toast readiness without stopping the toasting cycle: just side press the rotary knob during toasting, and the bread will automatically lift to allow having a look at the bread, and then return down to complete toasting.

4 AUTOMATIC MODES

Normal

The normal setting is perfect for making classic toasts.

Crumpet

Suitable for toasting crumpets on one side, place bread facing inwards.

Defrost

A special mode for defrosting and toasting frozen bread.

Reheat

This mode is suitable for heating bread — all conveniences for a tasty snack.

STAND BY MODE

- After 3 minutes of no use, the appliance will switch to stand by mode.
- The display will fade.
- To exit the Stand by mode, press button OK or turn the switch.

CLEANING AND CARE

- Disconnect the toaster from the power outlet before cleaning.
- Extract the pull-out tray at the bottom of the toaster, then clean it from breadcrumbs.
- Wipe it with a wet cloth and then with a soft dry cloth.
- Install the tray to its place and push it inwards until it's fully fixed.
- Wipe the body exterior with a wet cloth wetted with a soap solution, then wipe it with a soft dry cloth.
- To remove any additional crumbs, turn toaster upside down and shake.

Do not use for cleaning of metal surfaces of the product any abrasive particles, lemon acid, hard sponge or wire wool as this will damage the toaster.

Do not clean inside parts with metal scouring pads: piece can break off, touch electrical parts creating an electrical shock hazard.

Do not use toaster without crumb tray, do not allow crumbs to build up in the crumb tray. Failure to clean the crumb tray may result in a fire hazard and damage the toaster.

STORAGE

- Before you take the toaster away for storage, make sure it has cooled down completely.
- Clean the toaster, put the power cord to the cord compartment.
- It is recommended to store the toaster in assembled condition in a cool dry place isolated from places for acids and alkalies storing, between at 5 to 30°C temperature and maximum relative humidity of 65 %.
- Do not expose the device to significant temperature drops and direct sunlight.
- Do not store anything on top of toaster.
- Keep the appliance and its cord out of reach of children less than 8 years.

- Carefully read this operation manual before using the toaster and keep it for further reference.
- Make sure the mains voltage in your house corresponds to the voltage rating specified on the toaster label.
- Do not submerge the toaster, power cord or the power cord plug to water or another liquid. Do not let condensate form on these parts and do not operate the device in places with high humidity.
- Install the device on a dry, even, horizontal, and heat-resistant surface only.
- Do not leave the power cord hanging on the table edge or laying it on heated surfaces and prevent it from tangling.

- Make sure the electric mains ratings correspond to the device parameters specified on the label prior to using the toaster.
- It is prohibited to use the toaster outdoors or in moving vehicles.
- Do not put the toaster on a gas or electric stove, as well as in the immediate proximity of heat sources.
- The door or the outer surface may get hot when the appliance is operating.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision

- or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard and understand the hazards involved.
 - Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
 - The toaster is designed for toasting bakery products. Use the toaster as intended.
 - Do not leave the toaster operating unattended.

- Keep the toaster body clean. When cleaning, follow the instructions specified in the Cleaning and Care section.
- Always pull the power cord plug from the mains power outlet, when you leave the toaster unattended, upon completion of using it, as well as before cleaning, moving or taking it away for storage.
- The device may be transported in the original package only and in a fixed vertical position.
- Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal centre. The packaging material is recyclable. Dispose of the packaging in an environmentally friendly manner and make it available for the recyclable material collection-service.

REMEDIAL MEASURES

- If a device fault is detected, you should immediately stop using it and hand it over to the nearest BORK authorized service center for testing, replacement or repair.
- For reasons of safety, all repair and maintenance works shall be carried out only by representatives of authorized BORK service centers. Addresses, instruction manual and phone numbers of service centers are available at www.bork.com.

TECHNICAL SPECIFICATION

Voltage: 220–240 V
Frequency: 50 Hz
Power: 840–1,000 W Power cord length: 1 m
Dimensions (H×W×D): 205×170×280 mm
Weight: 2.6 kg
Made in China

Product designation information:
This device is designed for roasting and heating of bread.
Special sales terms are not specified.

CONFIGURATION

Toaster: 1 pc.
Operation manual with a warranty certificate:
1 pc.

Warning! Due to the continuous improvement of its products, the manufacturer reserves the right to modify the design, configuration and technical parameters.
See the latest update of this manual at www.bork.ru.

INFORMATION ABOUT CERTIFICATION

The product is certified.





Video reviews of home appliances premium class, expert advice, recipes and star guests – all this you will find on the official BORK channel on Youtube.



Premium home appliances collection, BORK product customer reviews, useful tips and news from official brand boutiques.



Tips for choosing home appliances, recipes from the brand-chef, design solutions and other ideas for a wonderful and comfortable life from BORK experts.

WARRANTY CARD

The BORK company carries warranty for 1 years from the date of sale of this product.

To avoid misunderstandings, we kindly ask you to carefully study the Operating Instructions, the conditions of warranty, check the correctness of the warranty card. Warranty is valid if correctly and legibly indicated: model, serial number of the product, the date of sale, clear stamps of the firm-seller, the buyer's signature. The model and serial number of the product must correspond to those in the warranty card.

If any of these conditions or when the data specified in the warranty card, altered, deleted or overwritten, the warranty card shall be deemed invalid. If the date of the sale cannot be established, in accordance with the legislation on consumer protection, the warranty period and service life are counted from the date of manufacture.

Product TOASTER
 Model T 781
 Serial number
 Date of purchase
 Information about the Seller
 (name, legal address)

The date of manufacture is encoded in the serial number, for example:
 1 and 2 signs — the week of manufacture; 3 and 4 signs — the year of manufacture;
 the last 5 signs — serial number.

The product tested, staffed, mechanical damage is absent.

I agree to the terms of the warranty and service.

Customer Signature

Seller Signature

.....
 STAMP HERE

Name and address of the manufacturer (the person authorized by the manufacturer), the importer, contact information are shown on the product packaging.

PLATINUM COLLECTION



TERMS OF SERVICE

The manufacturer reserves the right to refuse satisfying consumer demands for warranties in case of non-compliance with operating conditions, installation procedure, intentional or careless actions of the buyer (customer) or third parties, which caused damage to the product.

Warranty does not cover:

- elements and details, with natural wear. Natural wear means the consequences of product use which caused the deterioration of its technical condition and appearance due to the prolonged use of the product.

The warranty does not cover products with damage caused by:

- misuse, neglect, improper storage, improper connection, failure to observe the supplied operating instructions;
- foreign objects, substances, liquids, insects or animals inside the body of the appliance;
- impact of high and low ambient temperatures on heat sensitive parts of the product;
- mechanical impact;
- Improper repairs and other interventions resulting in changes to the product design;

- connecting to the network with a voltage other than specified in the instructions for use of the product, or a non-compliance of the electric supply to state standards of the Russian Federation;
- using the product for industrial and/or commercial purposes;
- damaged electrical cords;
- using cleaning products, not specified in the operation manual;
- the use of non-standard (non-original) consumables, accessories, spare parts;
- force majeure circumstances (fire, flood, lightning).

Replacing faulty parts in the product (parts, components, assembly units) during the warranty period does not lead to the establishment of a new guarantee period either for the entire product or the part replaced.

SERVICE CENTRE ADDRESSES

JSC «Сервис», Moscow, 10 Bolshaya Sadovaya St.

Current information about service centers in your area can be found at www.bork.com.

